


Osaki

**First Class LE
SPACE INTELLIGENT CHAIR**

OPERATION INSTRUCTIONS

SAVE THESE INSTRUCTIONS

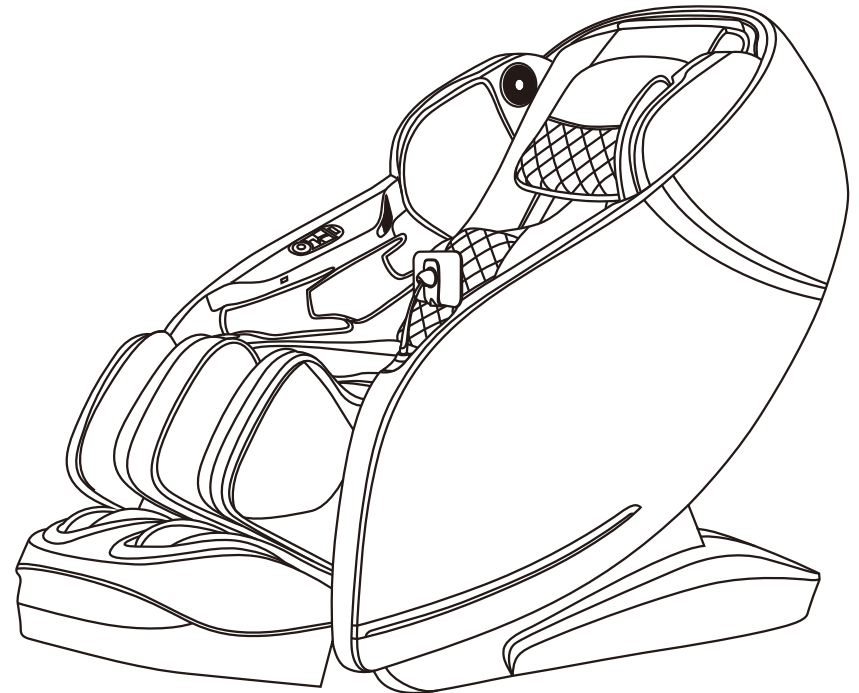

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

CONTENTS

Safety and maintenance matters	02-03
Instructions De Securite Importantes	04-05
Use safety warning	06-07
Part Name	08
Function	09
Touch screen manual controller interface introduction	10
Method of usage	11
1. Switch power supply on	11
2. Massage function control operation	11-25
3. Turn off power, stop massage	26
4. Installing the Arm Rests	26-28
5. Calf installation	28-29
6. Touch screen hand controller bracket installation instructions	30
7. Pillow Pad and backrest pad's dismounting and use manual	31
8. Floor Protection	31
9. Replace the chair	32
Product specifications	33

Important Safety Instruction

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using (this appliance)

DANGER-To reduce the risk of electric shock:

1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING-To reduce the risk of burns, fire, electric shock, or injury to Persons:

- 1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- 2) Do not operate under blanket or pillow. Excessive heating can occur and Cause fire, electric shock, or injury to persons.
- 3) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- 4) Use the appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- 6) Do not carry this appliance by supply cord or use cord as a handle.
- 7) Keep the cord away from heated surfaces.
- 8) Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 9) Never drop or insert any object into any opening.
- 10) Do not use outdoors.
- 11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 12) To disconnect, turn all controls to the off position, then remove plug from outlet.
- 13) The appliance is intended for household and indoor use only.

Important Safety Instruction

- 14) Connect this appliance to a properly grounded outlet only ,see grounding instructions .
- 15)Keep children away from extended foot support (or other similar parts
- 16)Do not use massager in close proximity to loose clothing or jewelry.
- 17)Keep long hair away from massager while in use.
- 18)Connect this appliance to properly grounded outlet only. See Grounding Instructions.
- 19)Donot use massager inclose proximity to loose clothing or jewelry.
- 20)Keep long hair away from massager while in use.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This product must be grounded, if it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock, this product is equipped with a cord having an equipment grounding conductor and a grounding plug, the plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER: Improper connection of the equipment grounding conductor can result in a risk of electric shock, check with a qualified electrician or serviceman of you are in doubt as to whether the product is properly grounded, do not modify the plug provided with the product-if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

1)This product is for use on nominal 120-volt circuit, and has a grounding plug that looks like the plug illustrated in sketch on the page 17, A temporary adapter that looks like the adapter illustrated in sketches B and C may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available the temporary adapter should be used only until a properly grounded outlet (shetch A)can be installed by a qualified electrician, the green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover, Whenever the adapter is used, it must be held in place by a metal screw.

Instructions De Securite Importantes

lors de l'utilisation d'un appareil électrique, des précautions de bases doivent être respectées, y compris ce qui suit :

Lisez toutes les instructions avant d'utiliser l'appareil.

DANGER- Pour réduire le risque de choc électrique:

- 1) Toujours débrancher cet appareil de la prise électrique immédiatement après usage et avant nettoyage

AVERTISSEMENT- Pour réduire le risque de brûlures, d'incendie, de choc électrique ou de blessures:

- 1) Cet appareil ne doit jamais quitter votre surveillance lorsqu'il est branché. Débranchez-le de la prise lorsqu'il est inutilisé, et avant de placer ou d'enlever des pièces.
- 2) Ne pas utiliser cet appareil sous une couverture ou un oreiller. Une chaleur excessive peut provoquer un incendie, un choc électrique ou des blessures corporelles.
- 3) Soyez prudent et maintenez une surveillance accrue lorsque cet appareil est utilisé par, sur, ou près des enfants, de personnes invalides ou handicapées.
- 4) Utilisez l'appareil uniquement pour un usage habituel, comme décrit dans ce manuel. Ne pas utiliser d'accessoires non recommandés par le fabricant.
- 5) Ne jamais faire fonctionner cet appareil si le cordon ou la fiche sont endommagés, s'il ne fonctionne pas correctement, s'il est endommagé ou s'il est tombé dans l'eau. Retournez l'appareil au service technique pour examen et réparation.
- 6) Ne transportez pas cet appareil par le cordon d'alimentation ou d'utilisation comme une poignée.
- 7) Gardez le cordon loin des surfaces chauffées.
- 8) Ne jamais faire fonctionner l'appareil en obstruant les ouvertures d'air. Gardez les ouvertures à l'air, libre de peluches, de cheveux, etc.
- 9) Ne jamais laisser tomber, ou insérer d'objet dans les ouvertures.
- 10) Ne pas utiliser à l'extérieur.
- 11) Ne pas utiliser dans les lieux où des aérosols (vaporisateurs) sont utilisés, ni là où l'oxygène est administré.
- 12) Pour débrancher, mettre tous les boutons de l'appareil sur la position arrêt, puis retirer la fiche de la prise.
- 13) L'appareil est destiné à un usage domestique et à l'intérieur seulement.
- 14) Connectez cet appareil à une prise correctement reliée à la terre. Voir les instructions de mise à la terre.

Securite Et Entretien

- 15) Éloignez les enfants du support de pied ouvert (ou des autres pièces semblables).
- 16) Ne pas utiliser de massage à proximité des vêtements amples ou des bijoux.
- 17) Garder les cheveux longs à l'écart de masseur en cours d'utilisation.
- 18) Raccordez cet appareil à une prise correctement mise à la terre.
- 19) Ne pas utiliser l'appareil de massage à proximité des vêtements amples ou des bijoux.
- 20) Gardez les cheveux longs loin du masseur pendant l'utilisation.

CONSERVER CES INSTRUCTIONS INSTRUCTIONS DE BASES

Ce produit doit être relié à la terre. Si il dysfonctionne ou tombe en panne, la terre fournit un chemin de moindre résistance pour le courant électrique afin de réduire le risque de choc électrique. Cet appareil est équipé d'un cordon avec un conducteur de mise à la terre des équipements et une prise de terre. La fiche doit être branchée dans une prise appropriée qui est correctement installée et mise à la terre conformément à la réglementation locale.

DANGER: un mauvais branchement de l'équipement à la prise de terre, peut entraîner un risque de choc électrique. Consultez un électricien qualifié si vous avez des doutes quant à savoir si le produit est correctement mis à la terre. Ne pas modifier la fiche fournie avec le produit si elle ne rentre pas dans la prise. Adressez vous à un électricien qualifié le cas échéant.


1) Ce produit est destiné à être utilisé sur un circuit de 120 volts, et possède une fiche de mise à la terre semblable à la fiche illustrée sur le croquis de la page 17. Un adaptateur temporaire qui ressemble à l'adaptateur illustré sur le croquis B et C peut être utilisé pour brancher cette fiche à un réceptacle 2-pole, comme indiqué sur le croquis B. Si une prise de terre n'est pas disponible, l'adaptateur temporaire ne doit être utilisé que jusqu'à une prise de terre correcte (croquis A) pour être installé par un électricien qualifié. L'oreille rigide de couleur verte, qui dépasse de l'adaptateur, doit être connectée à une terre permanente comme un couvercle de boîte de sortie mise à la terre. Chaque fois que l'adaptateur est utilisé, il doit être maintenu en place par une vis en métal.

S'il vous plaît noter que lorsque ne pas coincer votre détection des doigts Avant le nettoyage ou la réparation doivent couper l'alimentation

Use safety warning


⚠ Warning

- When the footrest lifting, people should not apply pressure on the footrest to avoid the massage chair falling forward to damage the product or cause personal injuries

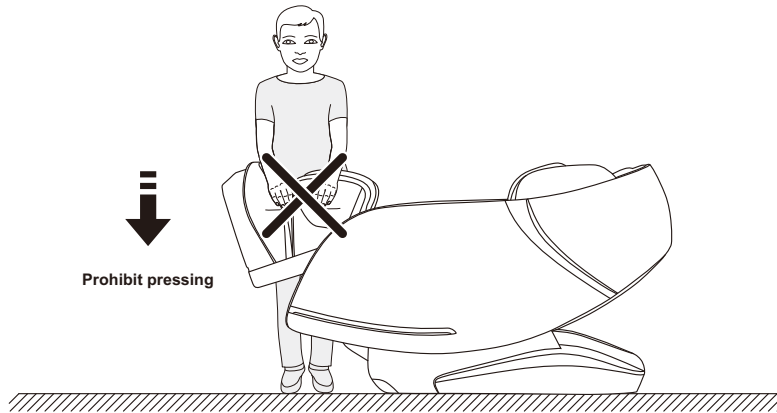

⚠ Warning

- Before sitting on the massage chair, Please make sure the massage hand cannot place in the seat position, so as avoiding the massage hand to damage the product or cause personal buttocks injuries.

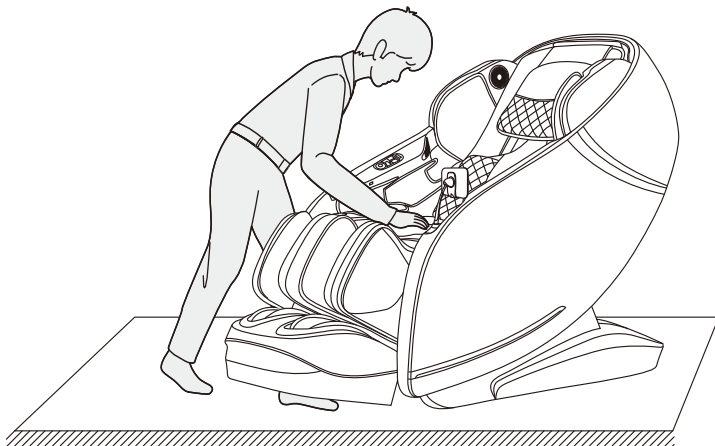


06

Use safety warning


⚠ Warning

- Do not strive to pull out the touch screen control cable or power cord during standby or power-on state to avoid product damaged or electrocution accidents. Advise you unplug the controller cable and power cord and store properly if you do not use the chair.
- The touch screen controller holder is fixed. During the use or movement of the massage chair, do not pull the holder hard to avoid damage the chair.

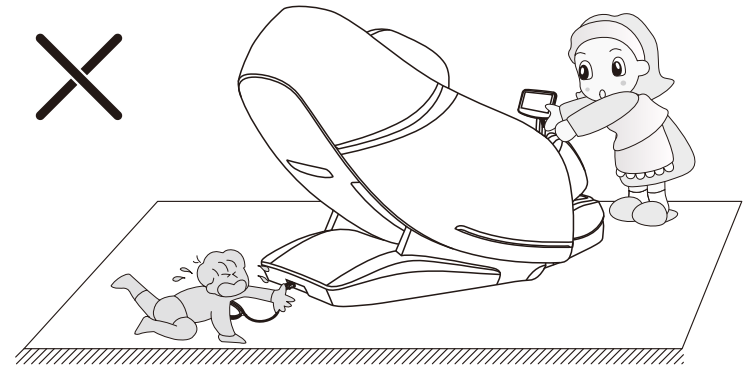


⚠ Warning

- When turning on the zero-gravity lying function, be sure to notice whether there are children or pets under the massage table under the bottom of the calf and the backrest to stay or play to avoid product damage and personal injury.

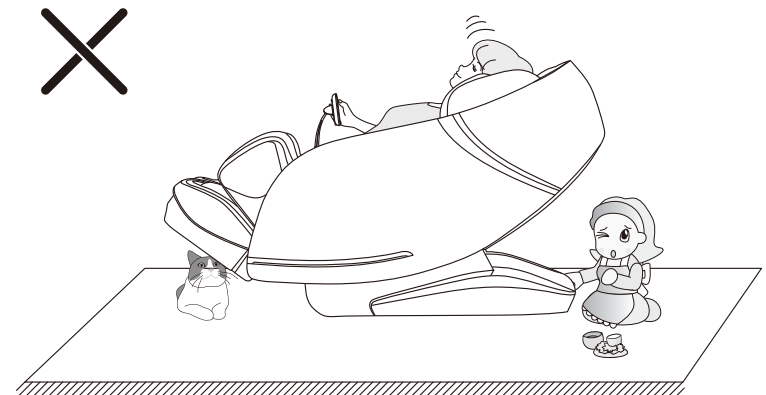

07

Part Name

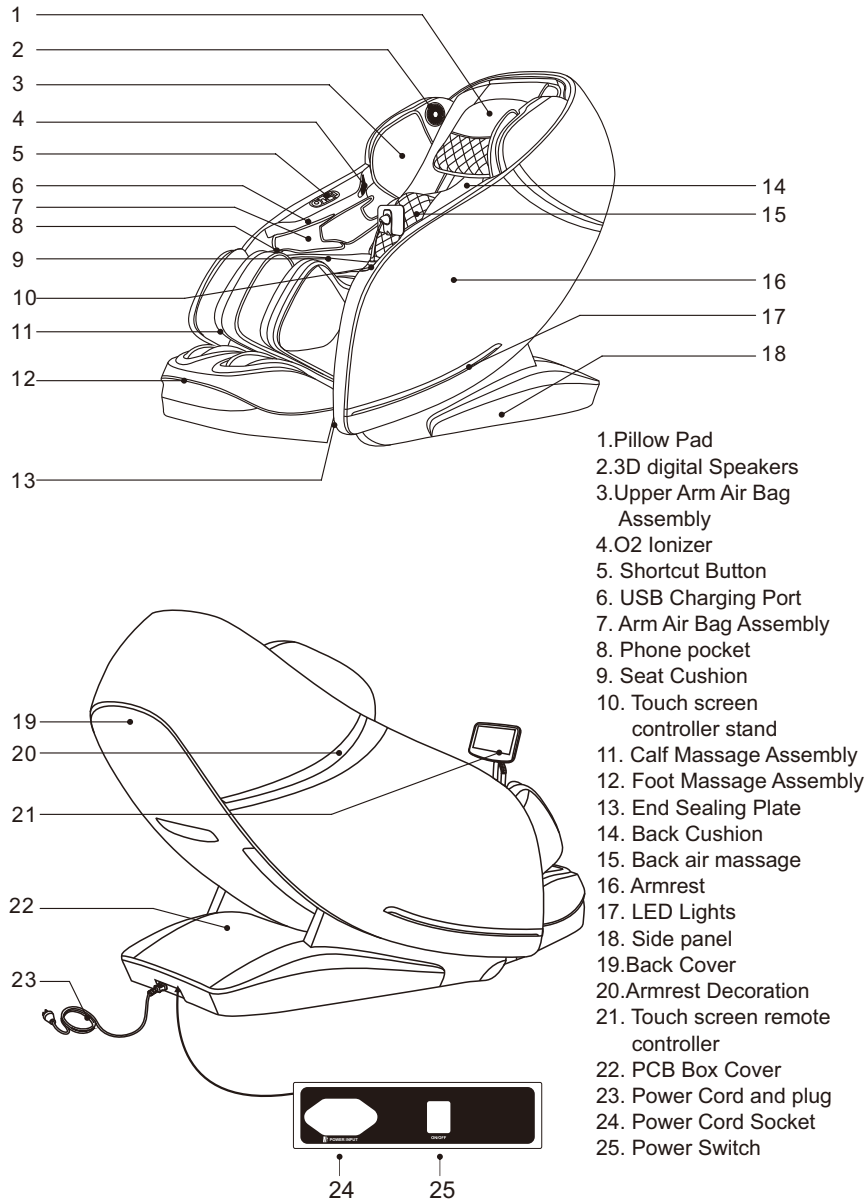


Function

- This product is designed with a set of intelligent 3D massage head that can walk up and down, front and rear telescopic, and silent design.
- It can automatically detect the position of the shoulder and can be fine-tuned; detect the human body curve and the position of the massage finger pressure point, and automatically adjust the front and rear telescopic length of the massage head according to the detected human body curve and the massage finger pressure point.
- With four different automatic massage scenes :VIP, Healthcare, Special, Relaxation. A total of 23 automatic massage program.
- Three memory functions: program memory I , program memory II , program memory III.
- The upper half manually selects the massage function; there are five kinds of massage position selections such as full, partial, fixed point, upper back and lower back; shoulder lifting, kneading, tapping, shiatsu, kneading and tapping and 3D six massage techniques; The massage technique has five speeds that can be adjusted; when massaged in tapping and shiatsu, the robot massage ball has five widths to adjust.
- Air massage function: Arm pressure massage function (built-in 8 airbags), upper arm air pressure massage function (built-in 4 airbags), and three levels air pressure intensity adjustment.
- Lower half air massage function: Waist pressure massage function (built-in 4 airbags), leg air pressure massage function (built-in 4 airbags), foot air pressure massage function (built-in 16 airbags), and three levels air pressure intensity adjustment.
- The back heating function uses carbon fiber as an infrared heating source
- As the back rest reclines down, this product is built to save wall space by making the chair slide forward.
- Music playback system: built-in 3D digital speaker on the left and right arms. The Bluetooth function of the smart device can be used to play music on a wireless connection.
- Twisting massage function: it uses the waist airbag pressure to swing around to form a twisting massage function, which relieves sedentary and causes tension in the waist muscles.
- The right armrest is provided with a negative oxygen ion button, raise button, recline button, zero gravity button, pause button, automatic mode button, foot adjustment button, and calf adjustment button.
- Leg lifting or recline adjustment, lifting or recline adjustment of leg and back, zero gravity I or zero gravity II.
- Calf squeeze function: it has a positive and negative squat and an airbag squeeze massage function on the lower leg, which can alleviate the stiffness or tension of the calf muscle caused by long standing; there are three different sputum modes.
- Roller massage function: At the bottom of foot, two pairs of mastoid rotating massage on toe root; scraping massage on the arch and heel.
- The footrest is equipped with an automatic sensor detection of the leg length function. When the calf is raised or lowered to a suitable angle, the footrest will automatically detect the length of the leg and detect the most comfortable massage area.
- The backrest rail adopts "SL" rail technology, which fits perfectly with the curve of the back of the human body and can enjoy close-fitting massage from the head to the thigh.
- Configure 7-inch touch screen remote controller.
- Armrest LED light decoration.
- Configuring a O2 Ionizer at both side of upper armrest.
- USB charging function on the right armrest.
- The upper arm is provided with a width adjustment function, which is adjusted in two steps (when it reaches the innermost position, the arm is pushed in about one gear to release the hand, the arm is automatically reset, and so on), adapting to different shoulder widths.
- Shutdown automatic reset function, massage head automatic reset function.

Touch screen manual controller interface introduction

Touch screen remote controller introduction

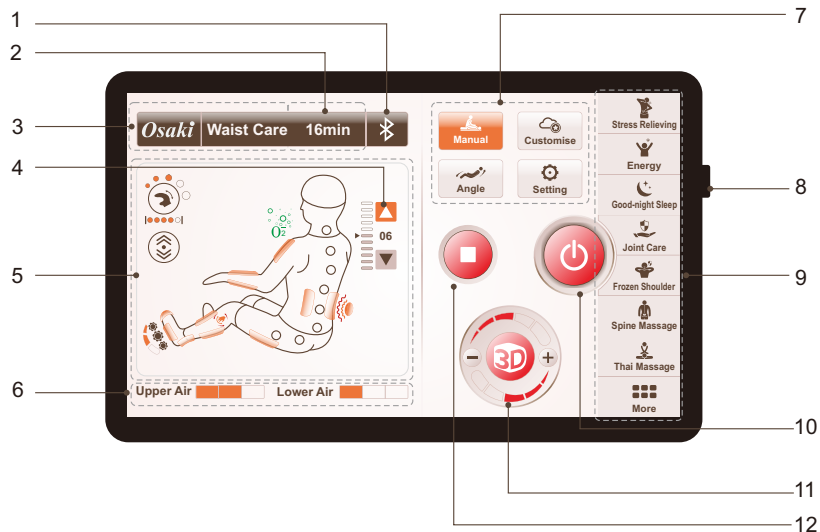


Note: The touch screen remote controller displays the color, massage function and message function icon layout order, please refer to the physical display!

1. Bluetooth switch and display
2. Time adjustment button and display
3. The status bar
4. The shoulder position can be adjusted up and down
5. Massage status information display
6. Air pressure intensity display
7. Manual, intelligent storage, angle adjustment, settings and other massage function keys
8. The power switch
9. Automatic massage function
10. Massage switch
11. 3D massage function keys
12. Operation / pause button

Method of usage


1. Switch power supply on

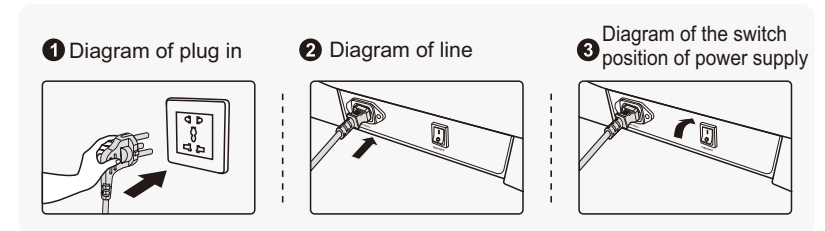

2. Massage function control operation

1) Start to massage


- After the massage chair cannot enter any mode operation in standby mode.
- Press "Power" button to start massage, enter the boot screen, backrest maintains the default position, calf rest raises slightly, choosing certain auto mode to start massage (Auto mode or memory function can be selected). The massage chair will shut down automatically if auto mode is not selected within 5 minutes.

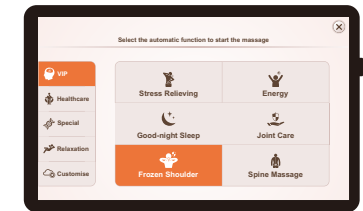


- VIP Auto Program: Stress Relieving, Energetic Morning, Good-night Sleep, Joint Care, Frozen Shoulder, Spine Massage.
- Healthcare Auto Program: Office Regimen, Sport Recovery, Brain Refresh, Spine Care, Waist Care, Legs Care.
- Special Auto Program: Health Recharge, Meridian Treatment, Keep Fit, Bottom Toning, Restoration Massage, Tiredness Relief.
- Relaxation Auto Program: Full-body Stretch, Thai Massage, Chinese Massage, Total Relax, Airbag.

Method of usage

- When you select any of the automatic modes, the backrest and calf position will be adjusted to the set angle.
- After adjusting the angle, the massage chair will automatically proceed detection of your shoulder position and acupressure points (Note: There is only shoulder position detection when in Frozen Shoulder program, while the others are whole body detection.). If the scan uncompleted, you press the “X” button to skip the detection, automatically operate the default massage mode.

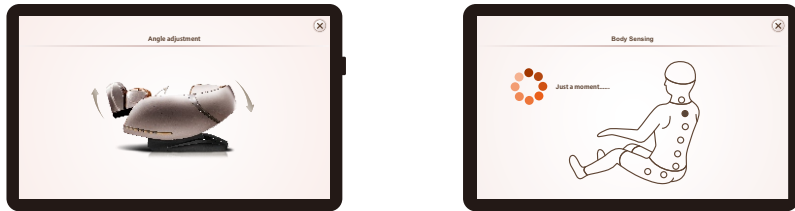

- Upon completion of scan, a beeping sound will emitting from the chair for 10 seconds or press the enter button, the massage heads will gently roll on your shoulders. During this period, if you would like to further adjust the detected shoulder region, you can do so by depressing the up or down shoulder button. There are 11 levels adjust position. If fail to detect, automatically operate the default massage point.

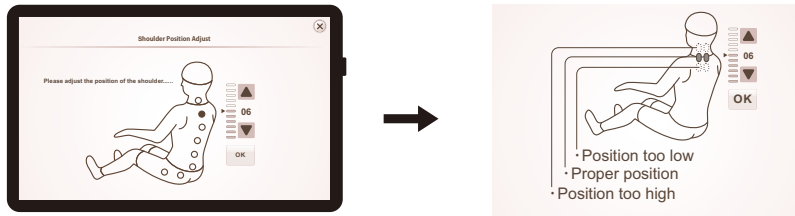


Buttons	Description
	Press to adjust the massage heads higher.
	Press to adjust the massage heads lower.

Method of usage

2)The pause button

- While the massage function is operate, press the “Pause” button to temporarily stop all massage functions; Press the “Pause” button again to continue the massage. If the pause time exceeds 20 minutes, all massage functions are automatically turned off.

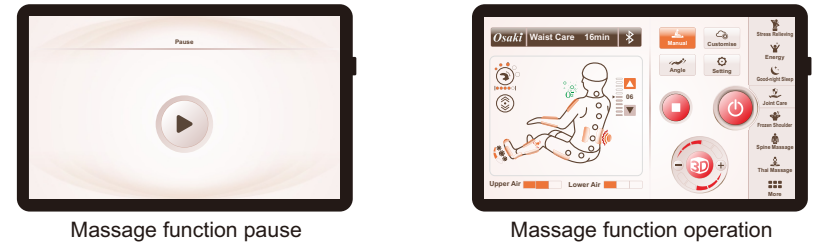

Massage function pause

Massage function operation

Run/pause Button	Functional description
Pause	In the operation state, press this button to pause all current massage functions.
Operation	In the pause state, press this button to continue the massage function before the pause

3)Upper body massage strength (3D key)

- Under the massage information interface, click the “-” or “+” button on the 3D icon to adjust the massage intensity of the upper back muscles, Five levels intensity.



Note:

- Massage strength: 3D massage strength, that is, the massage head is extended forward or the whole is retracted. The strength of the massage is adjusted to the strength within a certain massage area. Detect acupressure points, the strength of each massage point can be tested. You can adjust the strength of a certain massage point with this button in both automatic and manual conditions.

Method of usage

4) Automatic function

- There are four different automatic massage scenes in Auto mode:
- VIP Auto Program: Stress Relieving, Energetic Morning, Good-night Sleep, Joint Care, Frozen Shoulder, Spine Massage.
- Healthcare Auto Program: Office Regimen, Sport Recovery, Brain Refresh, Spine Care, Waist Care, Legs Care.
- Special Auto Program: Health Recharge, Meridian Treatment, Keep Fit, Bottom Toning, Restoration Massage, Tiredness Relief.
- Relaxation Auto Program: Full-body Stretch, Thai Massage, Chinese Massage, Total Relax, Airbag. There are 23 automatic massage functions in total. Click the "auto" icon to select the automatic massage, when in automatic massage, the speed and width can not be adjusted.
- Press "more" icon to select the corresponding automatic massage function.



Auto mode	Function	Description
VIP	Stress Relieving	Relieve fatigue and relax muscle, improve microcirculation of back & limbs and quickly relieve stress.
	Energy	The body gets rest after one night sleeping. Quickly wakeup all the body functions by massaging whole muscle to start a fresh day.
	Good-night Sleep	It helps balance your body, quickly improve sleep quality by massaging the 12 health acupoints.
	Joint Care	Care for the health of all joints by pushing, pulling, stretching and other massage modes
	Frozen Shoulder	The unique massage mode for neck and shoulder, relieve neck and shoulder pain and improve blood supply in the brain.
	Spine Massage	Massage each spine to protect its health, alleviate slipped disc.

Method of usage

Healthcare	Office Regimen	Increase physical exercise by massage, improve the body functions of Office Sedentary.
	Sport Recovery	Restoring physical fatigue quickly of after-exercise-body.
	Brain Refresh	Relieve neck and shoulder pain, promote blood supply to the brain by massaging YUZHEN and DAZHU points.
	Spine Care	Care for the health of spine and improve the lack of exercise.
	Waist Care	Focus on improving spine health and relieving stiffness in the waist muscles.
	Legs Care	Quickly relieve the soreness and muscle fatigue in lower body.
Special	Health Recharge	Improve the quality of nap and work efficiency.
	Meridian Treatment	Dredge the meridians, improve the body's microcirculation and immunity quickly.
	Keep Fit	Effectively massage buttocks and legs to shaping the body, reduce the accumulation of body fat.
	Bottom Toning	Improve overall blood circulation of body to enhance vitality and immunity.
	Restoration Massage	Wake up all body functions quickly, replenish physical strength and restore fatigue by massaging the 12 health acupoints.
	Tiredness Relief	Relieve fatigue, restore vitality, clean the blood lactic acid produced after exercise.
Relaxation	Full-body Stretch	Stretch the body to increasing its flexibility by Thai massage.
	Thai Massage	Comprehensively relieve fatigue and soreness through a deep massage for whole body.
	Chinese Massage	According to the traditional Chinese medicine theory, balance the body function to achieve physical fitness and remove the disease.
	Total Relax	Total Relax, soothing massage the whole body by kneading and tapping to relieve fatigue.
	Airbag	Focusing on body pressure massage, it can fully relax the body, restore fatigue, and calm the nerves.


Method of usage

5) Manual

- Click the "Manual" icon to enter the manual massage function selection interface, including manual, manual strength and width, back stretch, upper airbag massage, lower air bag massage, calf squeeze, foot rollers, Negative oxygen ions, heat and other massage functions.
- Click the "X" icon to close the manual massage interface.




Manual massage function selected interface

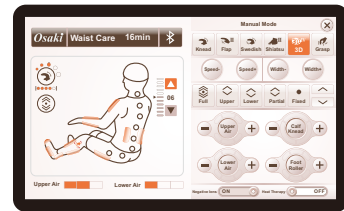


Manual massage function interface

01) Manual - manipulation

- Under the manual massage function interface, select the manual massage technique, back stretch, speed and width adjustment.
- Manual (manipulation): includes six different massage techniques: knead, tap, knead & tap, shiatsu, 3D, and shoulder. In the state of tap and shiatsu massage, the width of the massage ball of the robot is adjustable. The massage speed can be adjusted in other massage techniques except for stopping. You can also close the manual massage interface by clicking the "X" icon.

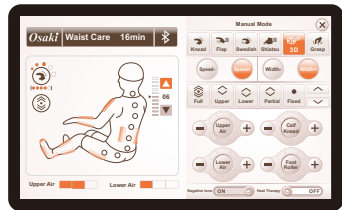

Manual massage function - manual interface

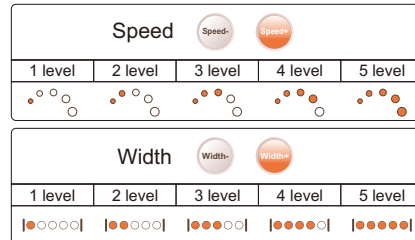


Method of usage

Manual button	Functional description
3D massage	4 different kinds of 3D modes, speed and strength may also be adjusted
Knead	Speed and strength may also be adjusted
Knead & tap	Combination kneading and tapping function. Speed and strength may also be adjusted
Shoulder	Shoulder grasping function relieve neck and shoulder tension. Speed and strength may also be adjusted
Tap	Two different tapping methods may be accessed by pressing this button again. Speed, width and strength may also be adjusted
Shiatsu	Two different shiatsu methods may be accessed by pressing this button more than once, speed, width and strength may also be adjusted with speed, back intensity, and width buttons.

02) Manual - back stretching

- Manual (massage area): includes massage functions such as fixed, partial, overall, upper back, and lower back.
- Click on the corresponding stretch mode icon to select the personalized massage function. You can also close the manual massage interface by clicking the "X" icon.

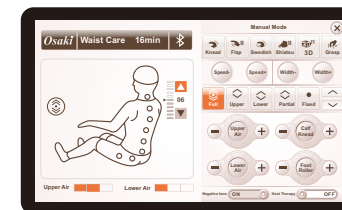


Manual massage function - back stretching interface

Method of usage


Function	Description
Point	Press button once, a single dot appears in the display. Massage apparatus will stay stationary.
Local	Press button again, two arrows appear. Massage apparatus will move in an approximately 3 inch range.
Upper back	Round back massage.
Lower back	Round back massage.
overall	Full back massage.
Upper adjust	Press and hold to move the range of the massage area up in the Fixed or Partial Position.
Lower adjust	Press and hold to move the range of the massage area up in the Fixed or Partial Position.

03)Manual - air pressure massage

- Manual (air pressure): includes upper body airbag pressure and lower body air pressure massage function. Click the air pressure function icon to turn the air pressure massage function on or off. Adjust the intensity by clicking the "−" or "+" button. You can also close the manual massage interface by clicking the "×" icon.

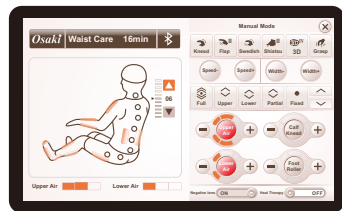

Manual massage function - air pressure selection interface

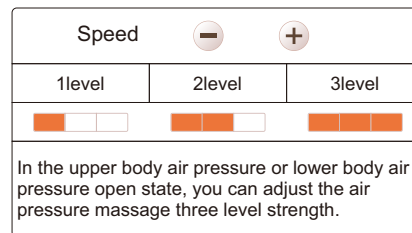


Function	Description
Upper Air	Turn the upper body air pressure massage function on or off.
Lower Air	Turns the lower body air pressure massage function on or off.

Method of usage

04)Manual - calf squeeze

- Select to turn the calf massage function on or off by pressing the "Calf Knead" button; There are three different calf massage modes. Adjust the calf massage mode by clicking the "−" or "+" button.
- Click the "×" icon to close the manual massage interface.

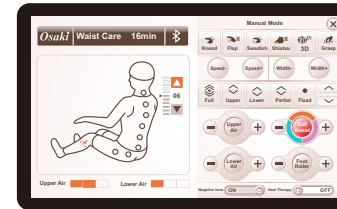

Manual massage function – the calf squeeze interface


Calf squeeze massage mode		
Mode I	Mode II	Mode III
Forward	Reverse	Positive inversion

After opening calf squeeze massage function, adjust positive and negative rotation massage function.


Function	Description
	Press the switch on or off the calf squeeze massage function.

05)Manual - foot rollers

- By Pressing "Foot Roller" to select switch on or off the foot rollers massage function. Click "−" or "+" to adjust the speed of the roller. The speed can be adjusted in three levels. You can also click "×" icon to close the manual massage interface.

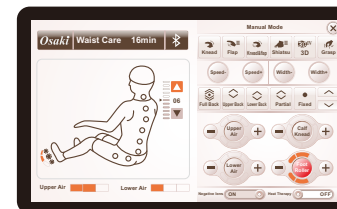

Manual massage function - foot rollers selection interface

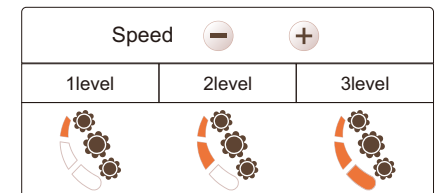


Function	Description
	Press the switch on or off the foot rollers massage function.


Method of usage

06)Manual - negative oxygen ion

- Click the “Negative Ions **ON**” button to select switch on or off the negative oxygen ion message function. You can also click the “✕” icon to close the manual message interface.

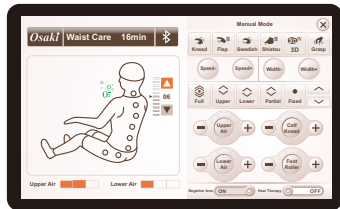


Manual message function - Negative Ions selection interface


Function	Description
 Negative oxygen ion	Press this button switch on or off the negative oxygen ion function.

07)Manual - back heating

- Click the “heat **ON**” button to select switch on or off the heating message function. Heating is far infrared heating function, and it will be warm after 3 minutes.
- Click the “✕” icon to close the manual message interface.

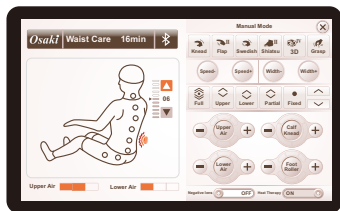


Manual message function - heating selection interface

Function	Description
 ON	Press this switch on or off the heating function.


Method of usage

6)Customise

- Click the “Customise” button icon to enter the program memory message function selection interface, including program memory I, program memory II, program memory III and other storage or recall functions.
- Select to the storage or recall message function by clicking on it.
- Storage: Store all current message methods, air pressure, angle, and other message functions.
- Call: Call the previously stored technique, air pressure, angle, and other message functions.
- Click the “✕” icon to close the program memory message interface.

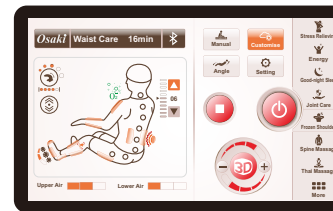


Program memory selection interface

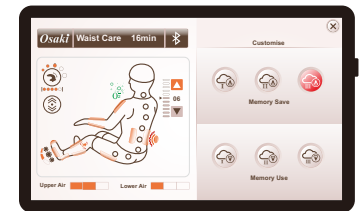


Program memory interface

7)Angular adjustment

- Click the “Angle” button icon to enter the angle adjustment selection interface, including message functions such as back rest & calf unit linked up, back rest & calf unit linked down, calf rest up, calf rest down, zero gravity, leg extension, and foot extension.
- Click the “✕” icon to close the angle adjustment interface.

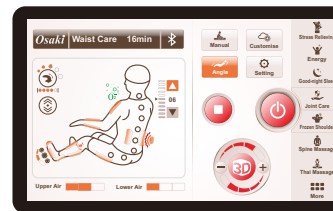



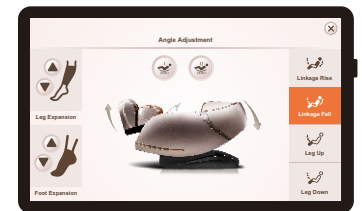

Angle adjustment selected interface





Angle adjustment interface

Method of usage



01)Lying angle adjustment

Function	Description
 Leg Up	Leg up: Press and hold to raise the calf unit independently of the backrest, release to stop; After the calf rest up is completed, the calf frame will automatically detect the length of the foot.
 Leg Down	Leg down: Press and hold to lower the calf unit independently of the backrest, release to stop; After the calf rest down is completed, the calf frame will automatically detect the length of the foot.
 Linkage Rise	Linkage Rise: Press and hold to raise both the backrest and calf unit at the same time, release to stop. After the back rest & calf unit linked up is completed, the calf frame will automatically detect the length of the foot.
 Linkage Fall	Linkage Fall: Press and hold to lower both the backrest and calf unit at the same time, release to stop. After the back rest & calf unit linked down is completed, the calf frame will automatically detect the length of the foot.

02)Zero gravity adjustment



Function	Description
 Zero Gravity I	Zero gravity I : Automatically adjust the calf and backrest position to zero gravity I position.
 Zero Gravity II	Zero gravity II : Automatically adjust the calf and backrest position to zero gravity II position.

03)Leg extension

Function	Description
	Up button: Press and hold to manually raise the calf massage assembly to the knee position, release to stop.
	Lower button: Press and hold to manually lower the calf massage assembly to the calf position, release to stop.
	Up button: Press and hold this button to manually adjust the foot massage assembly to slowly shorten, release to stop.
	Lower button: Press and hold this button to manually adjust the foot massage assembly to slowly extend, release to stop.

Method of usage

8)Settings

- Click the “” button icon to enter the setting selection interface, including backlight brightness adjustment, sleep time adjustment, button volume switch, serial number, language selection and other settings.
- Click the “” icon to close the settings interface.



Setting selection interface

Setting interface


01)Brightness

- Select the backlight brightness slider, slide left and right to adjust the backlight brightness.

02)Sleep off

- Select the sleep time button and set it for 1 minute, 3 minutes, 10 minutes or 30 minutes.

03)sound

- Click the “” icon to turn off the button volume, and click “” to turn on the button volume.

04)Language




- Language selection


05)Serial No.

- Displays information such as current equipment.


Method of usage

9)Bluetooth

- Click the “” icon to switch on or off Blue tooth. “” is to switch off the Blue tooth status, and “” is to switch on the Blue tooth status.
- After the Blue tooth-enabled audio source device (such as mobile phone, MID tablet, etc.) is paired with the massage chair Blue tooth module, the music played by the audio source device can be wirelessly transmitted to the massage chair audio system for music playback via Blue tooth.

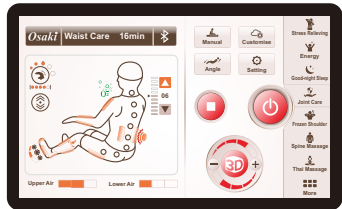


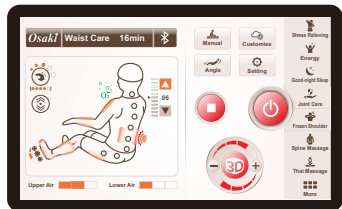
Blue tooth interface not enabled

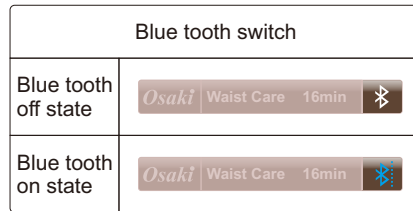


Attentions: When controlling the Blue tooth switch, you should return to the main information control interface. If you are in the manual, angle adjustment or custom storage control interface, Blue tooth can't be controlled.

10)Time adjustment

- Click the “” icon to adjust the massage time function. Each time you press it, it will add 5 minutes. It cannot exceed 40 minutes. If it exceeds 40 minutes, it will return to 5 minutes.





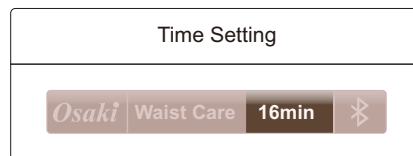




Time adjustment interface



Attentions: When adjusting the time, you should return to the main information control interface. If you are in manual, angle adjustment or custom storage control interface, the time cannot be controlled.

Method of usage


11)Handrail shortcut button

Function	Description
	Power button: Short press this button to pause the operation, long press for 3 seconds to open the key. Pause for more than 20 minutes during the massage will automatically turn off all massage functions.
NAI	O2 lonizer: Press this switch on or off the negative oxygen ions function.
	Back rest & calf unit linked up: Press and hold to raise both the backrest and calf unit at the same time, release to stop. After the back rest & calf unit linked up is completed, the calf sensor will automatically detect the length of the foot.
	Back rest & calf unit linked down: Press and hold to lower both the backrest and calf unit at the same time, release to stop. After the back rest & calf unit linked down is completed, the calf sensor will automatically detect the length of the foot.
	Zero gravity button: Each time the button is pressed, the position of the calf frame and the back frame is automatically adjusted to the zero gravity position. There are two zero gravity modes, and the cycle is switched.
	Up button: Press and hold to manually adjust the foot massage assembly to slowly shorten, release to stop.
	Lower button: Press and hold to manually adjust the foot massage assembly to slowly extend, release to stop.
	Up button: Press and hold to manually raise the calf massage assembly to the knee position, release to stop.
	Lower button: Press and hold to manually lower the calf massage assembly to the calf position, release to stop.
AUTO	Automatic mode button: each press, automatic massage function switch.
	USB jack: a USB charging port that can charge smart devices (such as mobile phones).

Method of usage

3. Turn off power, stop massage

- In the process of massage, press the power switch key to immediately turn off all massage functions, the backrest and the calf are reset, the massage time is up, and all massage functions are immediately turned off, and the backrest and the calf are not reset.
- Cut off the power supply of the whole machine, the figure (schematic diagram of the whole machine power cut).

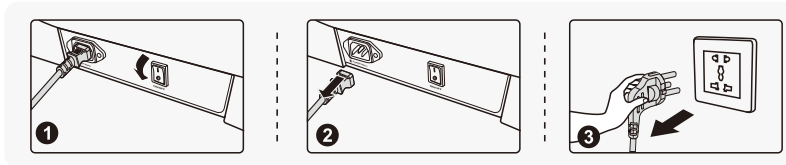

- ❶ Schematic diagram of the whole machine power turning off.
- ❷ Schematic diagram of unplugging the whole machine wiring.
- ❸ Schematic diagram of unplugging the power plug.

4. Installing the arm rests

- Locate the connector plug corresponding to the armrest from the bottom of the frame and pass it out from the center of the rear end of the frame (Figure 1).
- After passing the connector plug from the middle of the rear end of the frame, corresponding to each pair of wiring plugs (docking according to the mark on the physical pair wiring) (Figure 2).

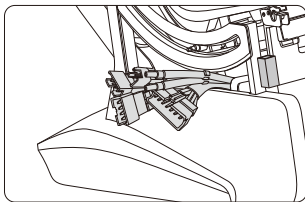


Figure 1

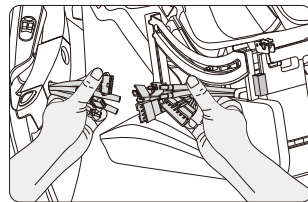


Figure 2

- The connector from the bottom of the frame is inserted firmly with the armrest connector, and the air pipe connector is also inserted into the position (Figure 3).
- After connecting with the corresponding connecting wires, gently insert the middle of the steel pipe behind the frame steel frame into the bottom of the frame by hand, and take care to avoid the air pipe collapse (Figure 4).

Method of usage

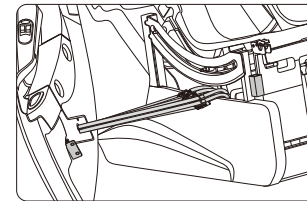


Figure 3

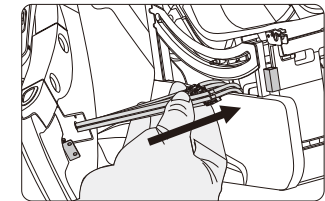


Figure 4

- Hold the front and rear ends of the armrests with both hands, first insert the limit shaft at the rear end of the armrest into the limit shaft card at the lower end of the back steel frame, then push the armrest up slightly by hand and check whether the armrest limit shaft is firmly inserted (Figure 5).
- After inserting the rear end of the armrest, hook the front end of the armrest into the steel tube of the seat frame and press down on the front end of the armrest; then gently shake the armrest to check whether the front and rear ends of the armrest are in place (Figure 6).

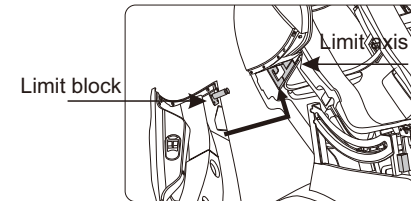


Figure 5

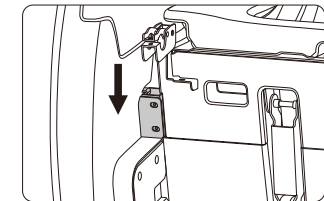


Figure 6

- Aim at the mounting hole of the steel frame on the front end of the fixed handrail, and fix the handrail and the steel pipe of the holder firmly with two (M5X16) screws (figure 7).
- Tighten the rear end of the armrest and the capsule with five M4x10 screws.

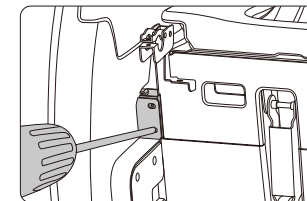


Figure 7

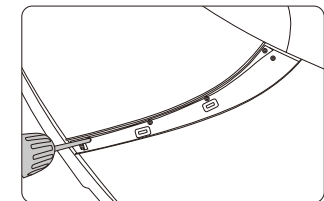


Figure 8

Method of usage

- Insert the hook on the lower part of the shoulder decoration bar into the groove below the armrest, then fasten the two metal fasteners in the middle to the armrest (figure 9).
- Tighten the handrail and decorative bar firmly on the inside shoulder of the handrail with a screw of ST4.2x12, and then gently shake the entire handrail to check whether the front and rear ends of the handrail are installed in place. After the armrest is installed, the installation steps of both armrest are the same (figure 10).

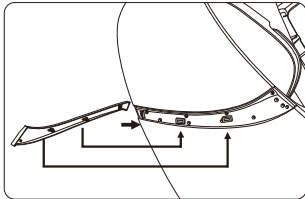


Figure 9

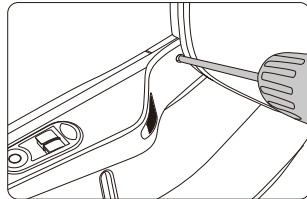


Figure 10

5. Calf in stall ation

- First cut the connecting wire and the air pipe tie fixed on the steel pipe (figure 1).
- Connect the connecting wire and the air pipe leading from the lower end of the frame to the lower leg joint, and confirm whether the docking is in place, and then insert the connecting line and air pipe into the bottom of the seat frame from the lower end hole of the abutment, and pay attention to avoiding the dead air pipe when filling (figure 2).

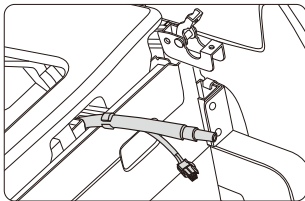


Figure 1

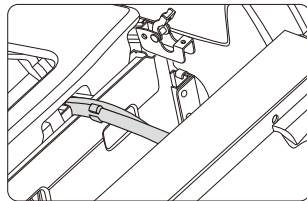


Figure 2

- First insert the rotating inner sleeve and the rotating outer sleeve into the left side of the calf and the right side of the lower leg (note: the large step must face inward) (figure 3).
- Then open the calf on the left and right mounts of the massage chair to support the hinge cover (figure 4).

Method of usage

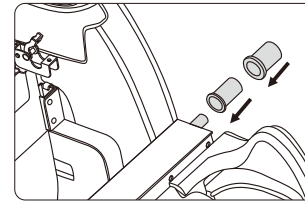


Figure 3

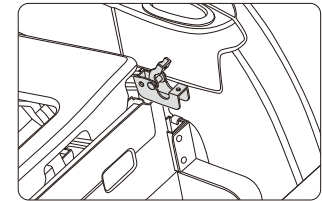


Figure 4

- Then hang the lower leg (left and right shaft) into the frame support hinge plate at the same time (figure 5).
- Cover the rotating shaft cover, press the rotating outer sleeve of calf, and then use a M5x12 pan head Phillips screw to lock the calf support rotating cover, and the calf is installed (figure 6).

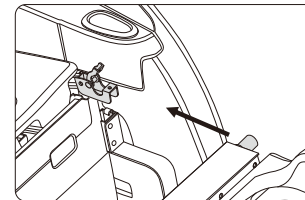


Figure 5

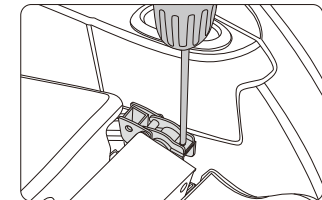


Figure 6

- After the screw is locked, the groove at the back end of the lower leg cover is clamped onto the pin axis, and then the front end of the lower leg cover is pressed down completely parallel to the rotating shaft cover plate, and the convex point at the side of the lower leg cover is stuck into the hole at the side of the lower leg hook, and the lower leg is installed (figure 7).

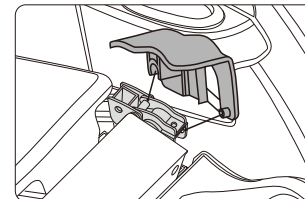


Figure 7

Method of usage

6. Touch screen hand controller bracket installation instructions

- Take out the touch screen remote controller stand from the accessory bag and put the mounting flange on the bracket assembly into the mounting seat on the armrest (figure 1).
- Secure the stand assembly to the armrest with three M4 screws (figure 2).

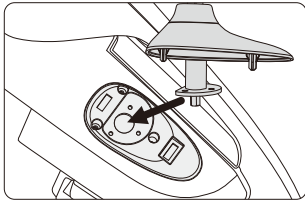


Figure 1

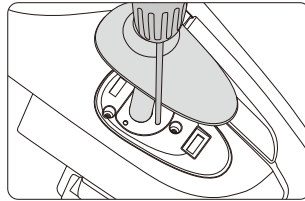


Figure 2

- Align the two metal cards on the decorative cover with the square bayonet on the armrest mount, and then press down firmly into the square bayonet to secure it (figure 3).
- After the entire stand is installed, shake the stand gently to confirm whether it is installed firmly; Stand installation is completed (figure 4).

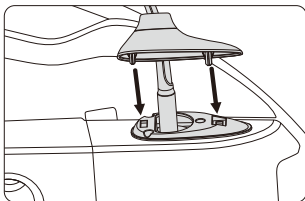


Figure 3




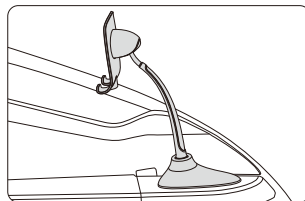


Figure 4

Method of usage


7. Pillow pad and backrest pad's dismounting and use manual

- Using head cushions can reduce the kneading massage intensity on neck and shoulder, according to your needs to decide whether the head cushions is needed (recommend head cushions). Backrest cushion and backrest connected by zipper (1), head cushions and backrest pad connected by thread gluing (2).

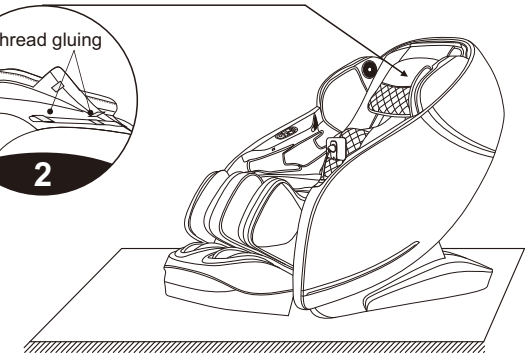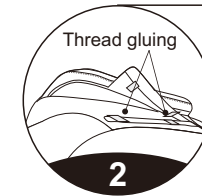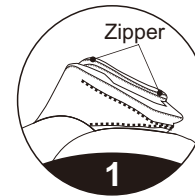

8. Floor protection

- Put the heavy massage chairs on the wood floor for a may damage the floor, so please place a carpet or other object to avoid this damage.

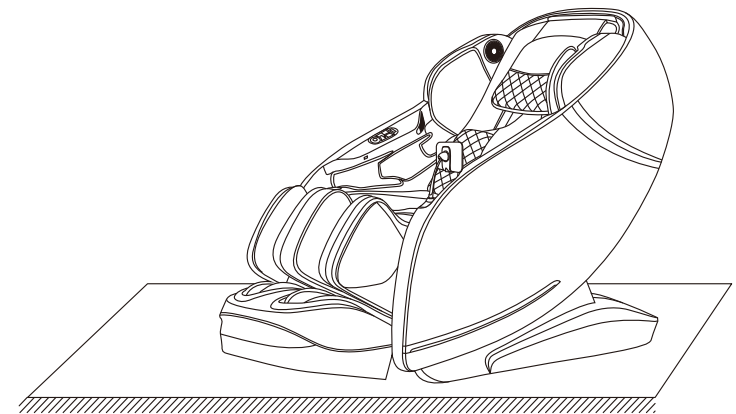


Caution: Do not move the chairs with its wheels on wood floor, rough ground or in a narrow space. Two people are required to lift the chair. During the lifting period, take the calf rest end sealing plate and backrest cover grooves as the force-bearing point (Please do not lift armrest directly.)


Method of usage

9. Replace the chair

- Ensure all the wires are pulled out of massage chair before moving, and it must be moved by two people. One person in front of and the other behind, front one lifts the massage chair up while the behind one presses it down. Massage chair can be pushed forward when its weight completely falls on the base pulley, then gently put it back to normal angle after moving to the right position.

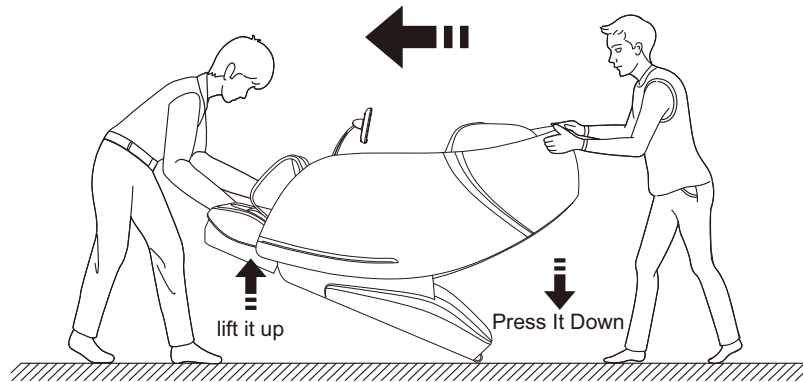

Note: During movement you must turn off the power first and then unplug the power cord and the controller cord.

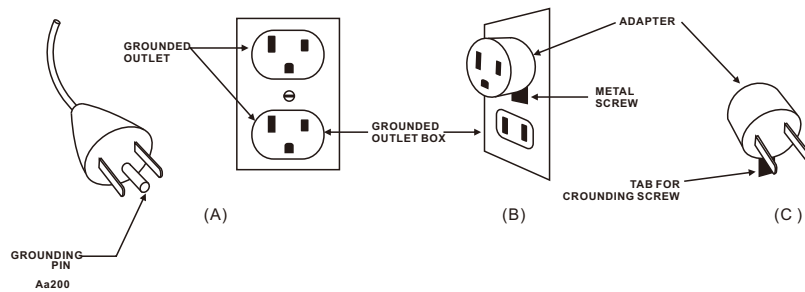

Product specifications

Model: First Class LE

Name: Massage Chair

Rated voltage: 110-120V~ 60Hz
 220-240V~ 50Hz/60Hz

Rated power input: 220W

Rated time: 20Min

Safety structure: Class I

Material introduction: PVC, PA, steel parts and electric & electron parts

MATERIAL	PU	LEATHER	CLOTH	WOOD